



# APPLICATION MANUAL


## PRECAUTIONS:

- Check the humidity and the temperature of both the surface & surrounding area.
- Do not apply in direct sunlight, on a hot surface or under a heat lamp.
- Keep away from children.




### STEP #1

Shake  
**IRON BURN**  
Before Use.

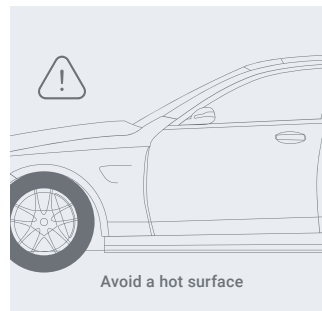


### STEP #2

Make sure the vehicle is in a cool environment. Do not wash in direct sunlight.

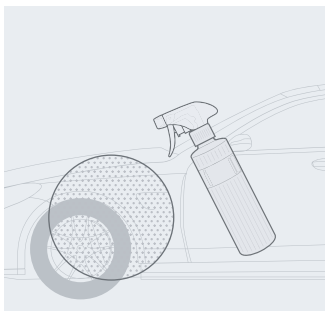


### STEP #3

Spray evenly across the surface.

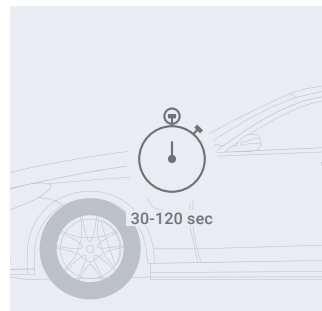


### STEP #4

Let dwell 30 - 120 seconds. Do not let dwell time exceed 120 seconds.

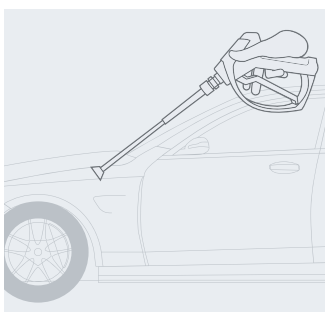

### STEP #5

Rinse off with pressurized water.

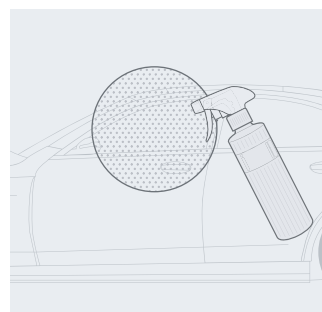

### STEP #6

Repeat as necessary.